 



# MobileOffice D430 Quick Start Guide




17-07-2BB1090-C

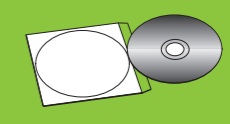

\* Calibration sheet

\* Keep the Calibration Sheet in case you need to calibrate the scanner in the future.


## 1 Connect and Install Driver

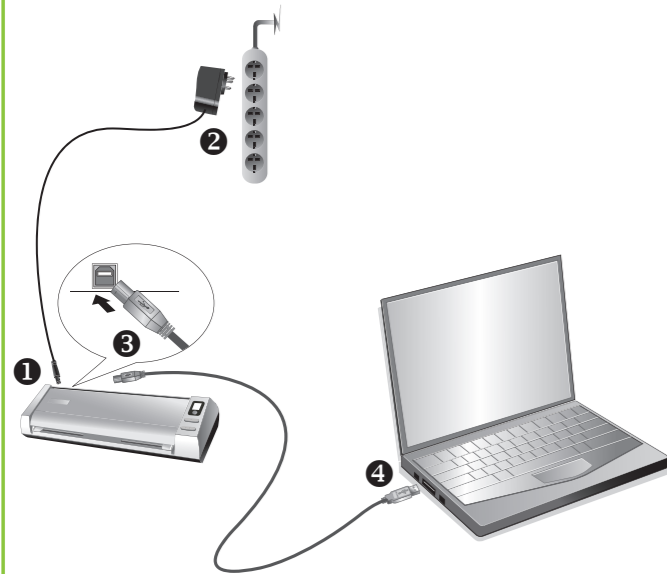



Insert the product CD or visit Plustek website to download and install scanner driver.

[www.plustek.com/d430](http://www.plustek.com/d430)

Check the system tray to see if the installation is successful when the scanner is connected.


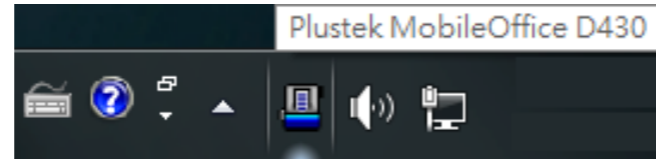


## 2 Scan Document & Plastic Cards

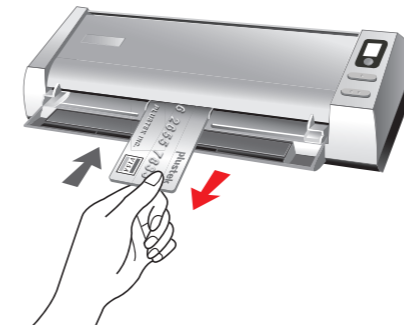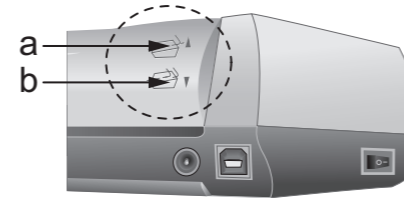


a. Up: horizontal eject


b. Down: vertical eject

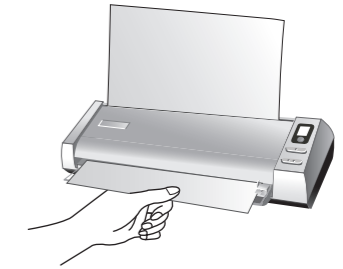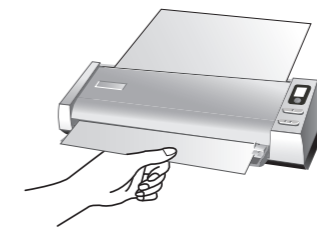


\* Remember to select **Card** as **Page Size** to scan and eject the card from the front side of the scanner.

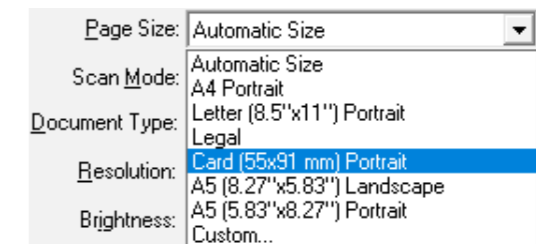


## PDF Utility

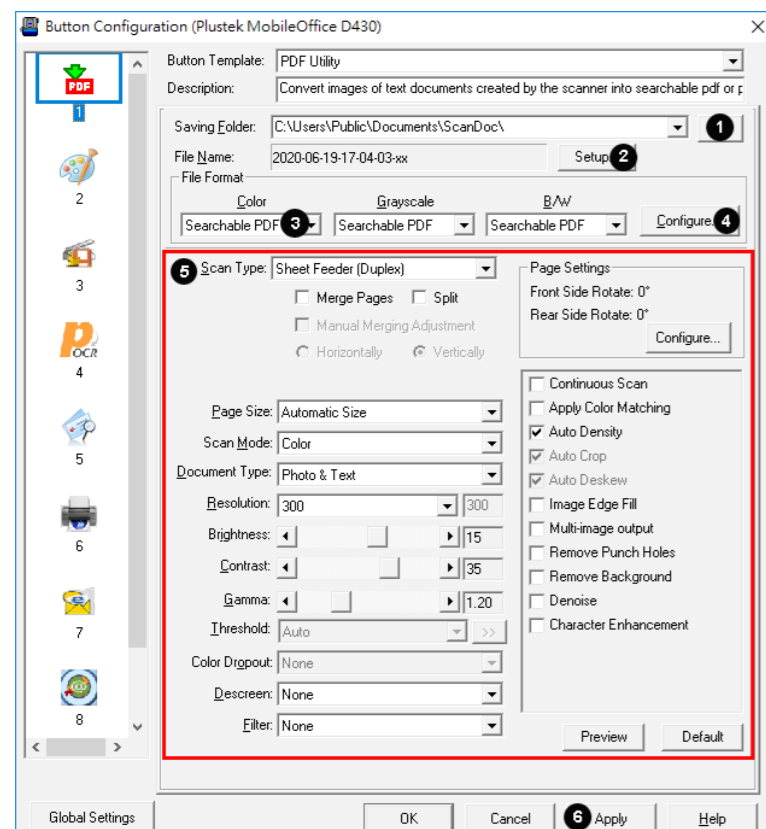

 1. Click button to select saving folder.
2. Click **Setup** button to select the filename format.
3. Select desired file format. This selection should match with the selection of **Scan Mode**.




4. Click **Configure** button to configure advanced settings, you may select to generate all pages in one file. Click **Setting** button to select the desired OCR language.

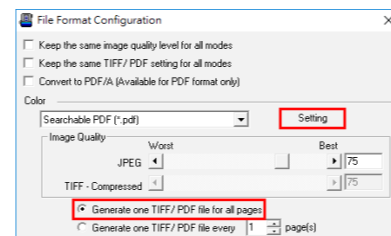


5. Check the scan settings and make any required changes.
6. After all settings are done, click **Apply** button.
7. Double-click on PDF icon to scan. Or press up/down function button to select corresponding number then press the **Scan** button on the scanner panel.

## BCR Utility

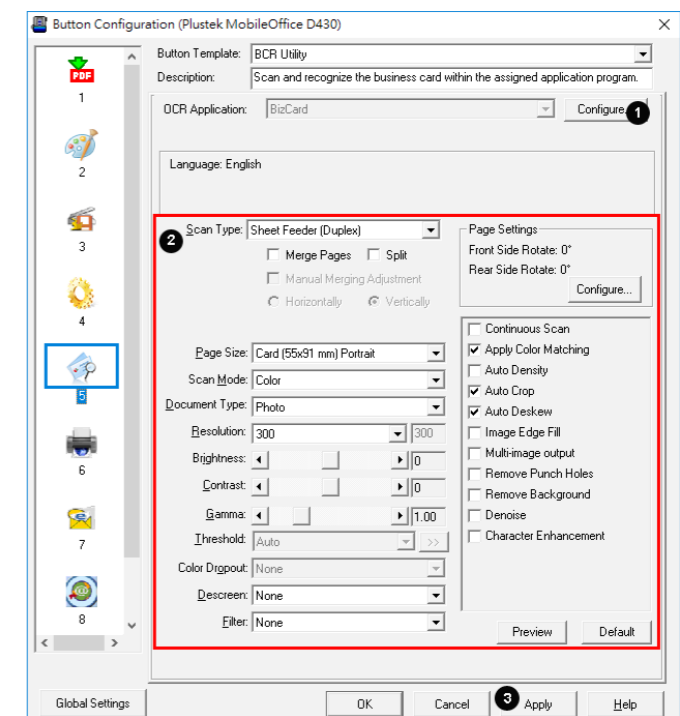

1. Select the desired BCR language.
2. Check the scan settings and make any required changes.
3. After all settings are done, click **Apply** button.

## File Utility

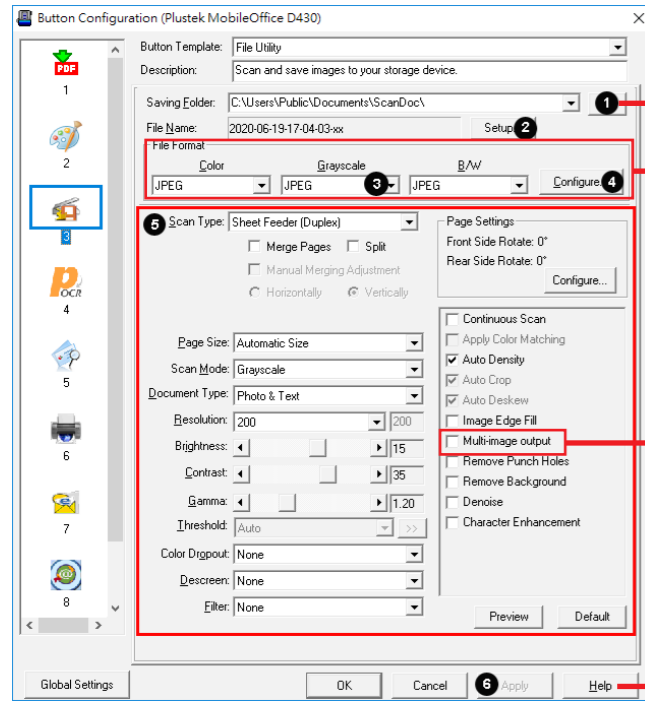


Select desired saving destination.

Select desired file format.

Select to output up to three multiple images by one scan.

Click to access online help for more detailed information.

## OCR Utility

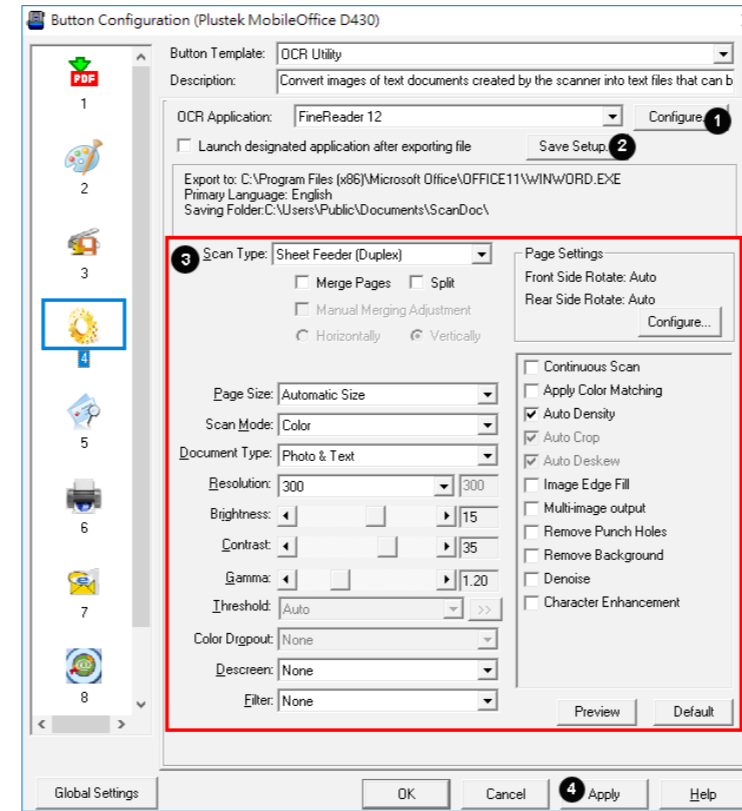


Select the desired file format.

Select the desired OCR language.

## More Utilities

All buttons are customizable, you may select the desired utilities from the **Button Template** dropdown list. For more information, please refer to software tutorial videos.

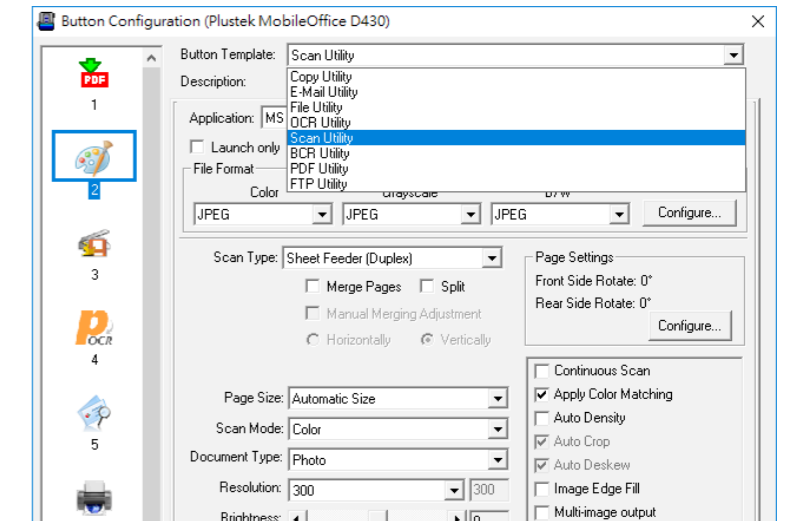


software tutorial videos

## Troubleshooting


**FAQ 1:** The plastic card scan is not successful.

### Solutions:

Please remember to select **Card** as **Page Size**.

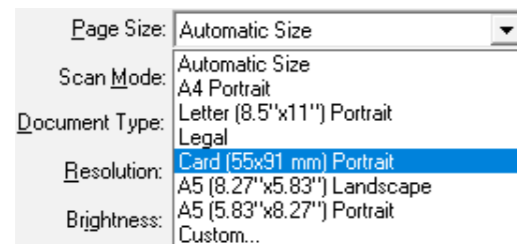


**FAQ 2:** The scanned images are strange.

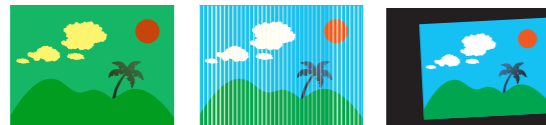


### Solutions:


• Reset the scan settings to default.

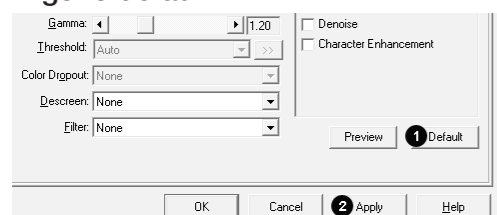

• Clean your scanner regularly to ensure the best scanning performance.

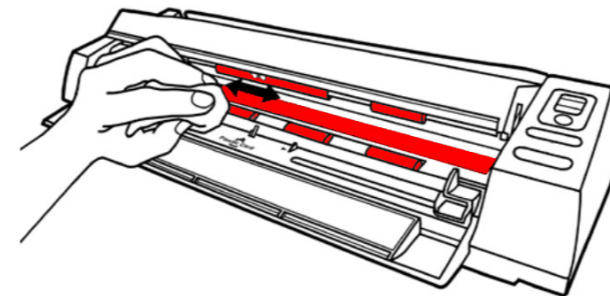

• Calibrate the scanner if colors of the scanned image vary a lot. Find **Calibration Wizard** as follows:

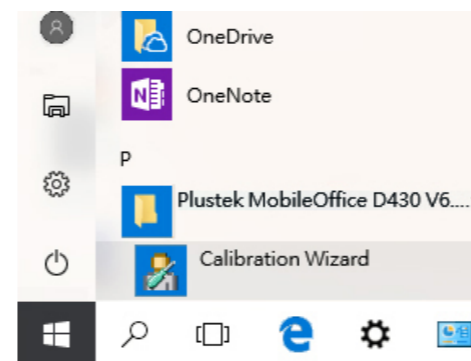

## Technical Support

### USA/CA

714-670-7713

9am to 5:30pm Pacific Time, Monday through Friday  
infoUSA@PlustekUS.com

### United Kingdom

0125-674-1513

9am-4pm, Monday through Friday  
support@agxuk.com